

This file has been cleaned of potential threats.

If you confirm that the file is coming from a trusted source, you can send the following SHA-256 hash value to your admin for the original file.

f193b050f3cff429a1dfad67be020f83e475a34352604e9201cf9d47a52da0f8

To view the reconstructed contents, please **SCROLL DOWN** to next page.

PROXKey Watchdata



License Certifying Authority

(n)Code Solutions- A Division of GNFC Limited
Version 1.0



PROXKey Watchdata

- **How to set PIN**

1. When you plug WD PROXKey token you will see as per screen shot, asking for set token password
2. You have to change token default password to new password 12345678

A screenshot of a PIN setup dialog box. It has a light gray background. At the top, it says "User PIN:" followed by a yellow rectangular input field. Below that, it says "Confirm PIN:" followed by a white rectangular input field. Underneath the input fields, there is a note: "Note: The length should be between 6-32 characters!". At the bottom, there are two buttons: "OK" and "SoftKeyboard".

User PIN:

Confirm PIN:

Note: The length should be between 6-32 characters!


OK SoftKeyboard

3. Once the password change process is successfully completed, they will not receive a pop-up message prompting them to change their password again.
4. Clarify that regular password changes are still encouraged to enhance security, but users will not receive the pop-up reminder after the initial password change.




- **How to Chang Token PIN**

1. You can change the PIN of your token. In the main interface of the ProxKey Token tool.
2. Change User PIN button. The following interface appears. Enter the old and new PINs and confirm the new PIN. Click OK.

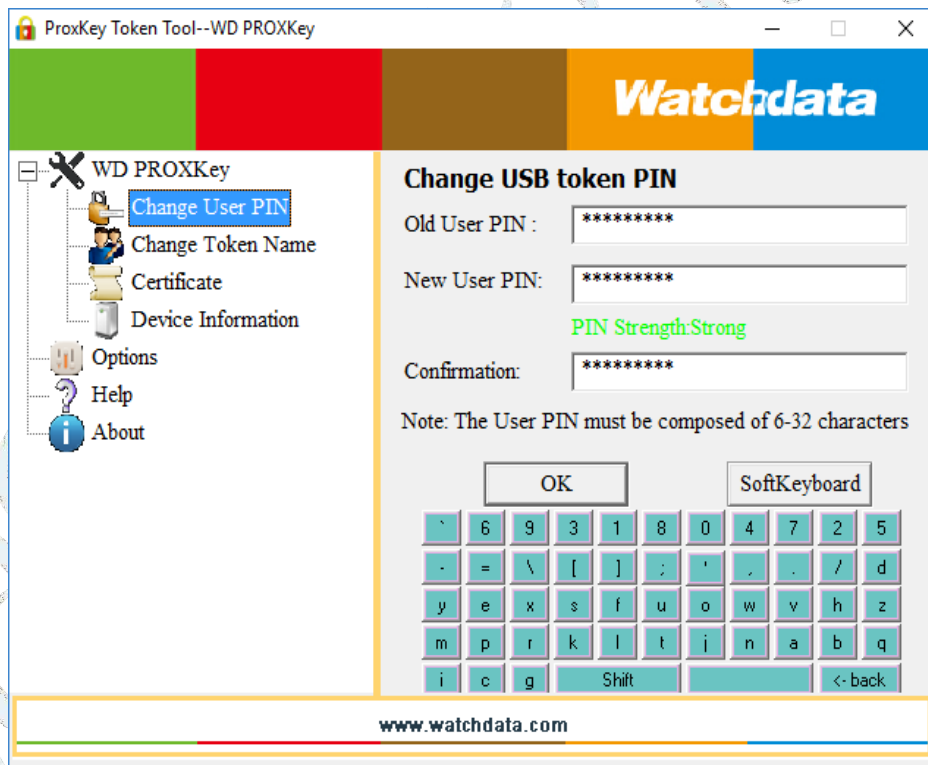



1. By clicking OK, the following interface may appear :

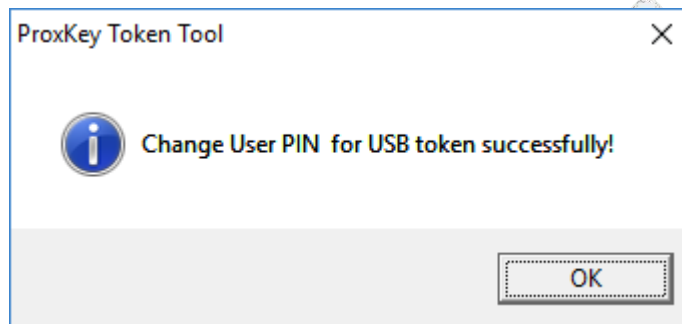

**(n)Code Solutions A Division of GNFC Limited Toll free
number – 6356894444**

E-Mail – tokensupport@ncode.indschelp@ncode.in

Thank you

PROXKey Watchdata

-